

# DIY **PROTECHMAT** Do it Yourself system

## Build your own boulder mat in **5** simple steps!

- 1 Your sketch with dimensions
- 2 Our design and price offer
- 3 Order and production
- 4 Delivery of all parts (foams, covers, tool bag, manual and spare parts if needed)
- 5 **Do It Yourself** installation of boulder mat

The mat for a thickness of 30 cm has passed laboratory tests for compliance with **DIN EN 12572-2 Annex C.**

## Most popular version: **Hybrid (Carpet+PVC)**

Compliance with the norm DIN EN 12572-2 Annex C and carpet with flame retardancy class Cfl-s1 helps with insurance!

KLÄTTERCENTRET

**18 colors of  
carpet available!**

*2m wide carpet for fast  
tightening and cleaning*





Easy assembling  
and replacement!


## Why **DIY** by Polskok?

Our DIY mats is a little bit more than just the foam - we offer ready, **complex** system of:

- ✓ Hard entrance and hard wall side for cover tightening
- ✓ Two-layer and overlapping foam core with position stabilization
- ✓ Finishing in one color (top and corner pads)
- ✓ All parts described and marked

## What do you get:

- ✓ High-quality and durable boulder mat
- ✓ Standard warranty
- ✓ A product that complies with the norm
- ✓ Easy installation
- ✓ Independence
- ✓ Cheap replacement and maintenance

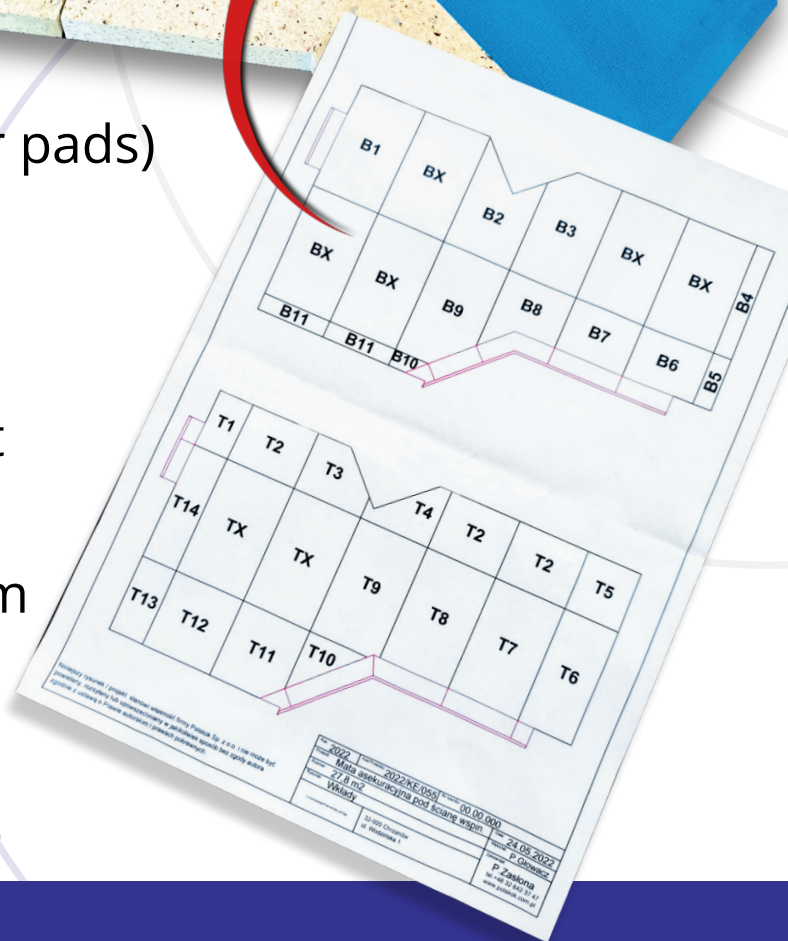

**SCAN & WATCH**  
**how easy it is!**



polskok\_official



Polskok



polskok@polskok.com.pl

[www.protechmat.com.pl](http://www.protechmat.com.pl)